

## CLEANING & MAINTENANCE INSTRUCTIONS (cont'd.)

4. Clean the element and drip area. **If liquids or other foreign material are allowed to drip down through the element pan and into the housing, the warranty is voided.**
5. To replace the element, reverse the above directions.
6. Use damp sudsy cloth to clean baked enamel and or chrome finished surfaces - NEVER USE ABRASIVES OR STEEL WOOL ON FINISHED SURFACES. To polish, use a non-abrasive glass cleaner.
7. Thoroughly wipe soap and water from surface or range and heating element DO NOT IMMERSE IN LIQUID.
8. Leave unit unplugged when not in use.

## WARRANTY

Cadco warrants that this Buffet Range be **free from defects** in material and workmanship for a period of one year from date of purchase. (Warranty provides repair of unit.) A copy of your original purchase receipt is required for proof of purchase date. This warranty **does not cover consequential damage** of any kind or damages resulting from accident, misuse, abuse, or external service or repair attempts by unauthorized personnel. Inquiries concerning this warranty and the use and maintenance of this unit should be directed to Cadco, Ltd.

**Please note: This appliance is a carry-in service item; customer is responsible for packaging the unit securely and returning it to Cadco\* for service**, along with a copy of your original purchase receipt, a description of the problem, and your name, shipping address and phone number. Ship to: Cadco, Ltd., Attn: REPAIR, 145 Colebrook River Road, Winsted, CT 06098. If shipping the unit for service, we recommend that you insure it for its original purchase price. Cadco is not responsible for damage or loss of unit in transit to us.

**Call Cadco at 860-738-2500 for Return Authorization Number BEFORE returning any item for repair. Return Authorization Number MUST be written on outside of carton to track the unit and avoid service delays. Warranty covers repairing the unit and returning it to customer.**

Warranty is applicable only in USA and Canada\*. (\*Canadian customers contact Joicey Food Services, Ltd. in Ontario, Tel. (905) 825-9665.)

## IMPORTANT NOTES:

Date of Purchase: \_\_\_\_\_

Place of Purchase: \_\_\_\_\_

**To expedite all warranty claims please keep your dated sales receipt from place of purchase.**

5/16/2007 RV04



# Light Duty Portable Buffet Ranges

## Use & Care Manual Models BRC-S1 & BRC-D1



120 Volts / 1100 Watts / 9 Amps / Single Phase



120 Volts / 1650 Watts (825 Watts per burner) / 13.75 Amps / Single Phase

## Cadco, Ltd.

145 Colebrook River Road, Winsted, CT 06098

(860) 738-2500 • Fax (860) 738-9772

Website: [www.cadco-ltd.com](http://www.cadco-ltd.com)

E-mail: [info@cadco-ltd.com](mailto:info@cadco-ltd.com)

Congratulations on your purchase of a Cadco Light Duty Portable Buffet Range. Please read all instructions carefully before use.

## IMPORTANT SAFEGUARDS

1. Read all instructions before use.
2. Do not touch hot surfaces! Always use hot pad or pot holder until unit cools.
3. To protect against electrical hazards, do not immerse cord, plug, or range in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet before cleaning. Allow to cool completely before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or, or if the appliance malfunctions or has been damaged in any manner. Call Factory Service at 860-738-2500. In Canada call (905) 825-9665.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter or touch hot surfaces.
9. Do not use appliance for other than intended use.
10. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a shock hazard.
11. A fire may occur if this appliance is covered or touching flammable material, including curtains, walls, etc., when in operation. **To avoid excessive heat on wall(s) while cooking, always keep a space of at least 4" between your range and your rear and side walls.**
12. **Do not use plastic dishes or plastic wraps on heating elements.**

### SAVE THESE INSTRUCTIONS

## IMPORTANT NOTES

1. Your unit is equipped with a grounded, current-carrying plug. This plug will fit into any 3 pronged outlet. This is a safety feature.
2. **Electrical connection must be a proper outlet for the 3 pronged cord. Before connecting power, make sure the voltage and frequency correspond to the data plate on the unit.**
3. A short power cord is provided to reduce the hazards resulting from accidents such as tripping, entanglement, etc.  
-If a long cord set or extension cord is used:  
(A) The marketed electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.  
(B) The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over accidentally.
4. When performing any cleaning or maintenance to this unit, be sure to unplug from power outlet first, and allow to cool.
5. Call Cadco Customer Service at 860-738-2500 with any questions or service needs.

## OPERATING INSTRUCTIONS

1. **Avoid letting water or food drop or boil over onto heating element. If liquids or other foreign material are allowed to drip down through the element pan and into the housing, the warranty is voided.**
2. Signal light, on models so equipped, will come on when range is plugged into electric outlet.
3. This is a light duty range with a 5-1/2" diameter heating element. As with all countertop ranges as well as stovetops, the most efficient cooking / heating will be done when using pans that are closest in diameter to the heating element. For best results, the pot or pan used should not exceed the heating element diameter.
4. Be sure your Portable Buffet Range is resting level on countertop. Avoid using pans that are unstable and easily tipped.
5. **To avoid excessive heat on wall(s) while cooking, always keep a space of at least 4" between your range and your rear and side walls.**
6. To avoid harm to your countertop, place range on a wooden cutting board or hot pad when in use.

## CLEANING & MAINTENANCE INSTRUCTIONS

1. Always unplug buffet range from electric outlet and allow to cool before cleaning. **Caution: Heating element may be hot without glowing red. Be sure element is cool before touching.**
2. The element hookup configuration has been changed to improve the longevity of the elements. The current configuration requires a different procedure to remove the element, if necessary for cleaning. (You may also clean the elements without removing them by gripping an element at the point opposite where it goes into the holes in the drip pan and tilting it up. **Do not force it up higher than it will go easily.**)
3. To remove an element (Tools needed: pliers and slotted screwdriver; **ONLY qualified service personnel should perform this procedure!**):
  - Be sure range is disconnected from electricity and the element is cool.
  - Locate the round push nut on the underside of the unit (directly below the element you want to remove.) You may need to apply pressure to the underside of the unit next to the push nut in order to relieve the pressure that holds it in place in order to get a grip on it with pliers.
  - While the pliers are gripping the push nut, use a screwdriver to loosen and remove the screw in the center of the drip pan.
  - Pull the element up slightly. There are 2 pieces of rubber sleeve on the wires attached to the element. Gently slide the rubber sleeves back and remove the element by detaching the "quick-disconnect" terminal.