

**Maintenance:**

The most effective and safe way to clean the range is with a mild detergent and a soft, moist cloth. **Do not use any scouring agents!**

**WARRANTY**

Cadco warrants that this Portable Range be **free from defects** in material and workmanship for a period of one year from date of purchase. (Warranty provides repair of unit.) A copy of your original purchase receipt is required for proof of purchase date. This warranty **does not cover consequential damage** of any kind or damages resulting from accident, misuse, abuse, or external service or repair attempts by unauthorized personnel. Inquiries concerning this warranty and the use and maintenance of this unit should be directed to Cadco, Ltd.

**Please note: This Portable Range is a carry-in service item; customer is responsible for packaging the unit securely and returning it to Cadco\* for service**, along with a copy of your original purchase receipt, a description of the problem, and your name, shipping address and phone number. Ship to: Cadco, Ltd., Attn: REPAIR, 145 Colebrook River Road, Winsted, CT 06098. If shipping the unit for service, we recommend that you insure it for its original purchase price. Cadco is not responsible for damage or loss of unit in transit to us.

**Call Cadco at 860-738-2500 for Return Authorization Number BEFORE returning any item for repair. Return Authorization Number MUST be written on outside of carton to track the unit and avoid service delays. Warranty covers repairing the unit and returning it to customer.**

Warranty is applicable only in USA and Canada\*. (\*Canadian customers contact Joicey Food Services, Ltd. in Ontario, Tel. (905) 825-9665.)

**IMPORTANT NOTES:**

Date of Purchase: \_\_\_\_\_

Place of Purchase: \_\_\_\_\_

**To expedite all warranty claims please keep your dated sales receipt from place of purchase.**

1/17/2008 RV00



**Large Portable  
Cast Iron Range**

**Use & Care Manual  
Model LKR-220**



2,000 Watts / 9.1 amps / 220 Volts / 60 Hz



NEMA 6-15P  
Plug

**Cadco, Ltd.**

145 Colebrook River Road, Winsted, CT 06098

860-738-2500 • Fax 860-738-9772

E-mail: [info@cadco-ltd.com](mailto:info@cadco-ltd.com)

Website: [www.cadco-ltd.com](http://www.cadco-ltd.com)

Congratulations on your purchase of a Cadco Portable Cast Iron Range!

## IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage when using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USE.**
2. Do not touch hot surfaces! Always use hot pads or pot holders until unit cools.
3. To protect against electrical shock, do not immerse base, cord or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool completely before putting on or taking off parts, and before cleaning or storing the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the Cadco Factory Service Department (call 860-738-2500 first) for examination, repair or adjustment. (Canadian customers contact Joicey Food Services, Ltd. in Ontario, Tel. (905) 825-9665.)
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. A fire may occur if this appliance is covered or touching flammable material including curtains, walls, etc., when in operation.
12. It is recommended that this appliance not be moved when it contains hot oil or other hot liquid.
13. Do not clean with metal scouring pads. They can scratch and ruin the finish of your unit. Pieces can also break off the pad and touch electrical parts, creating a shock hazard.
14. **Exercise extreme caution when using containers constructed of ceramic or glass.**
15. Do not cover the range with metal foils; this may cause overheating of the unit.
16. Do not use appliance for other than intended use.

## SAVE THESE INSTRUCTIONS

**NOTE:** A short power supply cord (or cord set) has been provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord. Longer cord sets or extension cords may be used if care is properly exercised in their use. If a long cord set or extension cord is used, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.

## OPERATING INSTRUCTIONS

### General Description:

Our portable ranges are the solution for high-demand use. The high-grade, long-life heating plates are equipped with an infinitely variable control. The light will come on **ONLY** during heat cycle. It will cycle on and off with temperature.

### Initial Use:


Heat the appliance without a pot for approximately 10 minutes at maximum setting in order for the special coating to seal. Temporary smoking is normal during initial use.

### Cooking Utensils:

- Use only pots and pans designed for electric ranges with the suitable diameter. Uneven or too-small pot bottoms do not allow efficient heating and will result in loss of energy.
- The LKR-220 heavy-duty cast iron heating element is 9" diameter. It handles pots/pans with up to 15 quart capacity.

### Directions for Use:

The heating element is equipped with a patented thermostatic system which gives an infinitely variable temperature selection. Your heating element always heats up with maximum power until it reaches the temperature you selected. Thereafter, the thermostat adjusts itself to maintain the temperature; this is indicated by the pilot lamp going on and off. After a short period of time, you will find the temperature that is right for your application, and re-setting the temperature is generally not necessary.

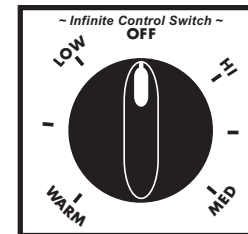

### Temperature Range Settings

- This range has an infinitely variable control. It may be set at any point at or in between the LOW / WARM / MED / HI markings on the dial for desired heat level.
- The control knob may be turned either clockwise or counterclockwise to set the desired temperature.

### For Your Safety:

- In use, all surfaces will get hot. Please use caution when handling the appliance, to avoid the risk of getting burned.
- Keep the cords of this and other adjacent electric appliances away from the range.
- Overheated fat or oil can ignite. Foods prepared with fats or oils are not to be left on the range without supervision.
- Never immerse the appliance in water for cleaning purposes. Be sure that no water or steam can infiltrate the underside.
- Always place the appliance on a heat-resistant surface.
- For protection against fire, put the appliance at least 4 inches (10 cm) away from the wall. The space above the appliance must be kept free. Unhindered air supply must be ensured.
- Do not clean with a steam jet appliance.
- Do not use the appliance as a space heater. Improper use will result in loss of warranty.