


# HOW TO CHANGE OVEN TIMERS


## Cadco/BroilKing/UNOX XA0 \_\_\_ MODELS

7/30/2002

**Tools Needed: Phillips head screwdriver**

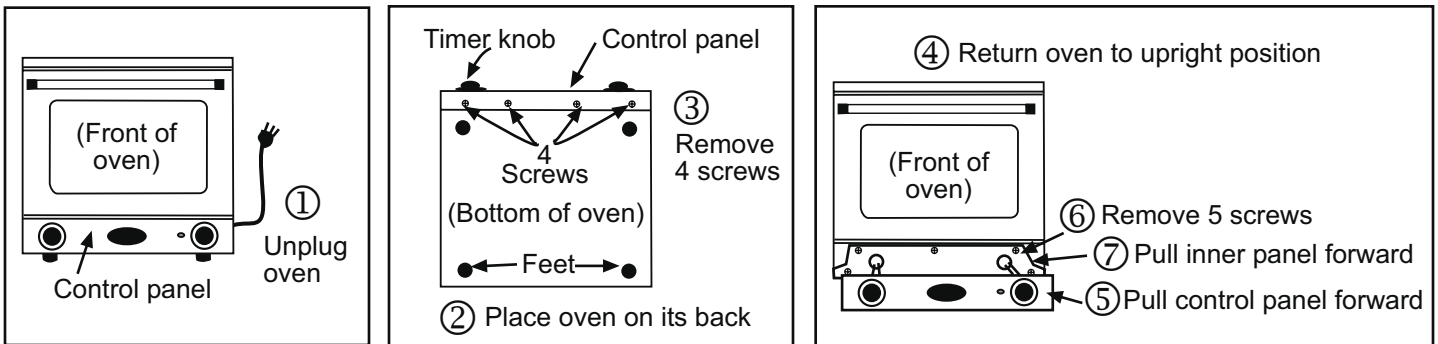

- 1) **ALWAYS be sure oven is disconnected from electricity before changing timer.**
- 2) Place oven on its back with control panel facing up.
- 3) Remove the **4 bottom screws** on the underside of the control panel.  
(No need to remove the top 2 screws.)
- 4) Return oven to upright position.
- 5) Pull **control panel** forward.
- 6) Remove the **5 screws** from inner panel.
- 7) Pull **inner panel** forward.

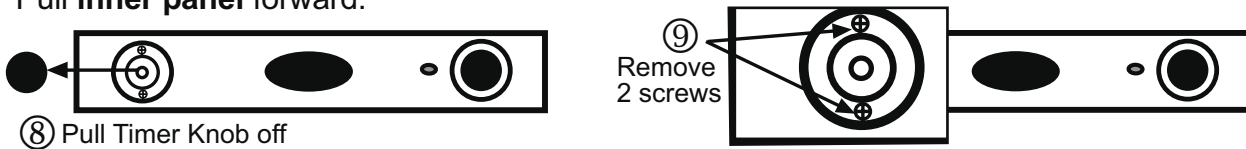

- 8) Pull **timer knob** off.
- 9) Remove **2 screws** inside timer ring to release timer.
- 10) Pull **timer** back from behind inner front panel to access the **terminals**.
- 11) Hold **replacement timer** with **shaft** facing you and **flat side of shaft** facing right.
- 12) One by one, pull the wires off the terminals of the original timer and attach each wire to the corresponding terminal on the replacement Timer.
- 13) *Reverse the steps above to reassemble the Control Panel.*

